

### UNIVERSAL SOLAR PANEL CATALOG NO. F-SLR

USE THIS MANUAL FOR PART #'s: F-RNGR2 / F-ADMRL / F-PPXRD-NA / F-802SC2 / F-SCTXL / F-MTY400 / F-MTY600 / F-VGRPL / F-600TLNA / F-702RLNA / F-REVXL / F-REVXL-DD / F-006SLE / F-005SLU / F-PEZPL2 / F-194PHBL-NA

#### MANDATORY LEAVE THIS MANUAL WITH OWNER

Read and follow all instructions. Solar Panel function can only be ensured if the Solar Panel is installed and operated according to these instructions.

#### • FOR SAFETY REASONS

- **NEVER** swim alone
- **NEVER** use the lift with a dry pool
- NEVER apply direct water pressure to the electronics
- **NEVER** permit children to play on or around the lift
- **DO NOT** allow children to use the lift without adult supervision

### **READ CAREFULLY**

Check entire box and all packing materials for parts. Before beginning assembly, read the instructions and identify parts using the figures and parts listed in this document.

It is critical that all parts be carefully inspected prior to installation. If any damage occurred in transit, Aqua Creek Products, LLC must be notified within three days of receipt of unit.

Proper installation cannot be overstressed, as an improper installation voids Aqua Creek's warranty and may affect the safety of the user. Aqua Creek Products, LLC 9889 Garrymore Lane Missoula, MT 59808 Toll Free: (888) 687-3552 Local/Intnl: (406) 549-0769 www.aquacreek.com



### **Aqua Creek Products PRODUCT ORDER FORM**

PART NO.	QTY.	REV.	DESCRIPTION	REPLACEMENT PARTS
INV03223	1	P1	WELDMENT - SOLARMADE PANEL BRACKET	
INV01674	1	P1	SOLAR CHARGER - CONTROLLER	
INV03252	1	P1	DC WATERPROOF STEP UP CONVERTER	
INV00219	1	P1	SOLAR CHARGER - WAGO 3 LEVER CONNECTOR	
INV00218	4	P1	SOLAR CHARGER - WAGO 2 LEVER CONNECTOR	
INV00220	1	P1	SOLAR CHARGER - WAGO CONNECTOR HOUSING	
INV01154	1	P1	CABLE - SOLAR CHARGER - W/FUSE	
INV00103	1	P1	PLUG - DC PORT DUMMY - (LINAK)	
INV00610	1	P1	GROMMET - 1/2 ID x 5/8 OD	
INV03221	1	P1	SOLARMADE 10W 12V PANEL	
INV03271	2	P1	L-BRACKETS, PLASTIC, WHITE	
INV00724	2	P1	NH - 1/2"-13 HEX NUT	
INV01169	1	P1	WF - 1/2" FLAT WASHER	
INV00741	4	P1	NN - #4-40 NYLOCK NUT	
INV00367	4	P1	BOLT - FH - #4-40 x 1/2 - PHILLIPS	
INV00736	6	P1	NN - #10-24 NYLOCK NUT	
INV03283	6	P1	BSH - #10-24x1/2" SOCKET HEAD BOLT	
INV01879	1	P1	LASER/WJ - MIGHTY SOLAR BRACKET	
INV01170	4	P1	WF - 1/4" FLAT WASHER	
INV00735	2	P1	NN - 1/4"-20 NYLOCK NUT	
INV01878	2	P1	BB - 1/4"-20X5" BUTTON HEAD BOLT	
INV03107	1	P1	WELDMENT - ANGLE BRACKET	
INV01174	8	P1	WF - 3/8" FLAT WASHER	
INV00413	4	P1	BH - 3/8"-16X3 3/4" HEX HEAD BOLT	
INV00739	4	P1	NN - 3/8"-16 NYLOCK NUT	
INV00987	1	P1	LASER/WJ - LIFTING EAR SPACER	
INV00410	4	P1	BH - 3/8"-16X3" HEX HEAD BOLT	




### Aqua Creek Products PRODUCT ASSEMBLY


THE CHARGER CABLE GETS PLUGGED INTO THE 24V IN-OUT BOX WHICH IS LOCATED OPPOSITE OF THE ACTUATOR PLUG. RUN THE CABLE ALONG THE SIDE OF THE CONTROL BOX BRACKET SO IT IS OUT OF THE WAY.

NOTE: MAKE SURE THE PLUG IS FULLY ENGAGED INTO THE CONTROL BOX. MAKE SURE THE LIGHTS COME ON (SEE NEXT PAGE) AND THE LIFT FUNCTIONS NORMALLY WHEN THE 24V SOLAR CHARGER IS INSTALLED. IF THE LIFT DOES NOT FUNCTION, CHECK ALL CONNECTIONS GOING INTO THE CONTROL BOX AND MAKE SURE THEY ARE PRESSED ALL THE WAY IN. WHEN INSTALLED PROPERLY THE BATTERY WILL CHARGE AS THE LIFT OPERATES SIMULTANEOUSLY.

NOTE: THE SOLAR PANEL IS NOT A REPLACEMENT FOR THE REGULAR CHARGER. THE BATTERY NEEDS TO BE PLACED ON THE WALL MOUNT CHARGER PERIODICALLY TO ENSURE A FULL CHARGE AND A LONGER BATTERY LIFE. THE SOLAR PANEL SIMPLY ALLOWS FOR A LONGER SPAN OF TIME BETWEEN REGULAR CHARGES. FOLLOW THE BATTERY MAINTENANCE INSTRUCTIONS IN YOUR LIFT OWNER'S MANUAL.



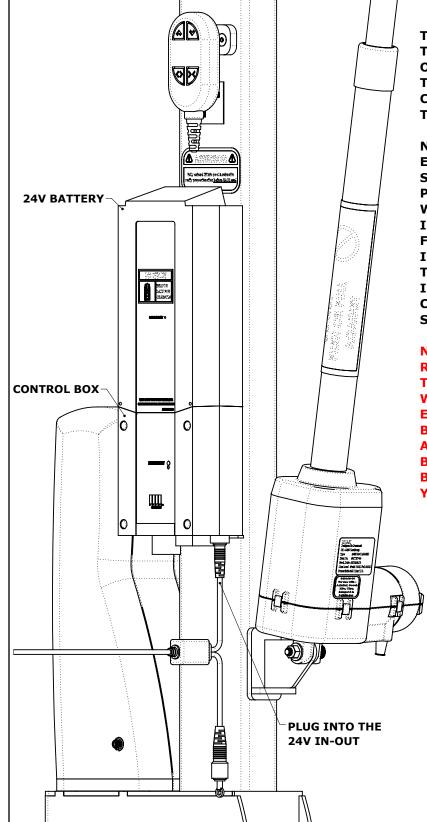

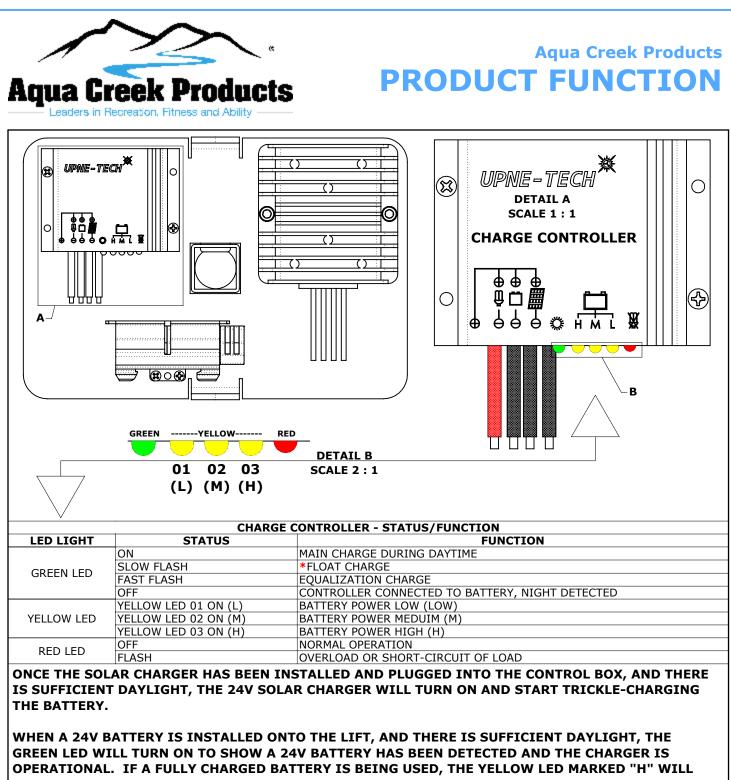

OPERATIONAL. IF A FULLY CHARGED BATTERY IS BEING USED, THE YELLOW LED MARKED "H" WILL LIGHT UP AS WELL. IF A NON-FULLY CHARGED BATTERY IS BEING USED, EITHER THE YELLOW LED MARKED "M" OR THE YELLOW LED MARKED "L" WILL TURN ON, DEPENDING ON HOW DRAINED THE BATTERY IS.

SEE THE TABLE IN THE IMAGE ABOVE FOR MORE DESCRIPTIONS ON WHAT ALL OF THE LED LIGHTS MEAN WHEN THEY ARE EITHER ON OR OFF.

THE 24V SOLAR CHARGER WILL CONTINUE TO CHARGE THE BATTERY, EVEN AS THE LIFT IS BEING USED. ONCE THE 24V SOLAR CHARGER HAS BEEN INSTALLED IT WILL FUNCTION WITHOUT ANY NEED FOR ADJUSTMENT. THE USER SHOULD CHECK THE INDICATORS PERIODICALLY TO MAKE SURE IT IS WORKING.

\*A METHOD OF MAINTAINING A CELL OR BATTERY IN A CHARGED CONDITION BY CONTINUOUS, LONG-TERM, CONSTANT VOLTAGE CHARGING AT A LEVEL SUFFICIENT TO BALANCE SELF-DISCHARGE.



# Aqua Creek Products LINAK BATTERY MAINTENANCE


**DO NOT EXPOSE THE BATTERY TO FREEZING TEMPERATURES.** 


**DO NOT** EXPOSE THE BATTERY TO PROLONGED PERIODS OF EXTREME HEAT OR SEVERE COLD TEMPERATURES.


**DO NOT** EXPOSE THE BATTERY TO LONG PERIODS OF DIRECT SUNLIGHT. HEAT WILL SHORTEN YOUR BATTERY LIFE. OPTIMUM OPERATING TEMPERATURE IS BELOW 20 DEGREES CELSIUS (68 DEGREES F.) AQUA CREEK RECOMMENDS A BATTERY COVER BE USED WITH SOLAR CHARGERS SINCE THE BATTERY IS LEFT ON THE LIFT FOR EXTENDED PERIODS OF TIME.

NEVER DROP OR BUMP THE BATTERY PACK. THIS MAY RESULT IN LOOSE OR DAMAGED INTERNAL CONNECTIONS, AND MAY DAMAGE THE BATTERY TERMINALS.

KEEP BATTERY TERMINALS CLEAN AND FREE FROM DIRT AND CORROSION TO ENSURE GOOD CONTACT. THE TERMINALS MAY BE CLEANED USING ALCOHOL AND A COTTON SWAB. CLEAN OFF ANY CORROSION OR DISCOLORATION OF THE BATTERY CONTACTS WITH A SCOTCH-BRITE<sup>™</sup> PAD AND THEN APPLY DIELECTRIC GREASE (SUPPLIED WITH LIFT) AS SHOWN IN THE FIGURE BELOW.

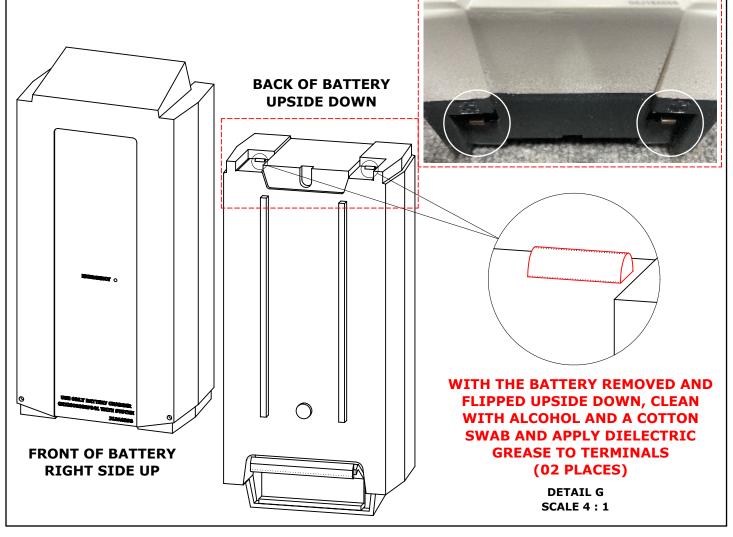


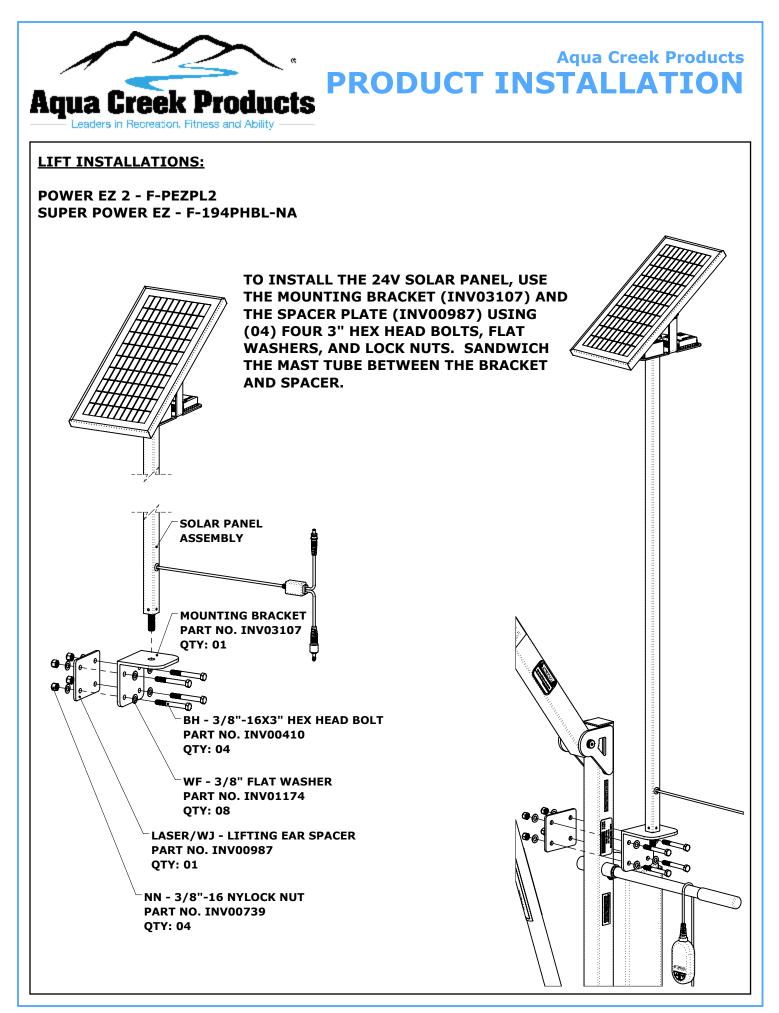

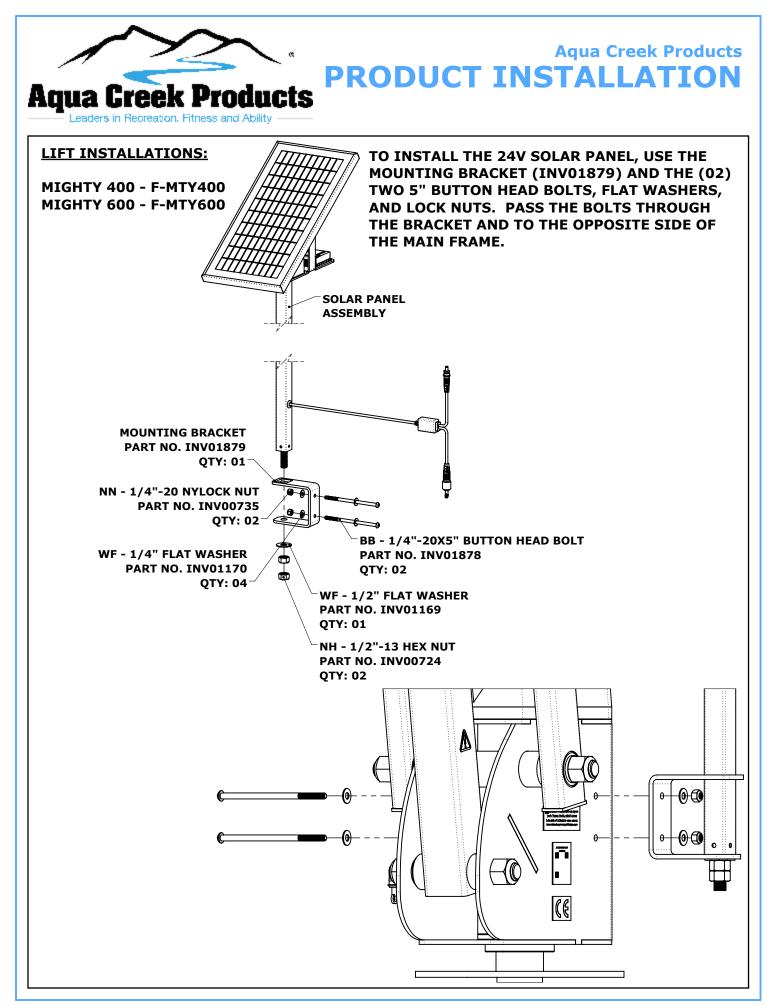




#### **LIFT INSTALLATIONS:**

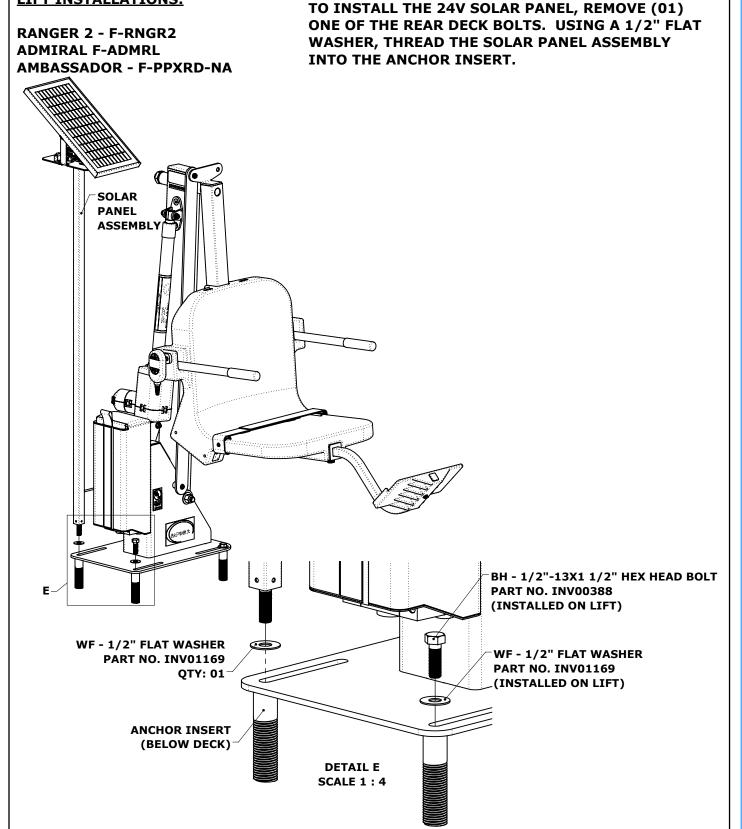




#### **LIFT INSTALLATIONS:**

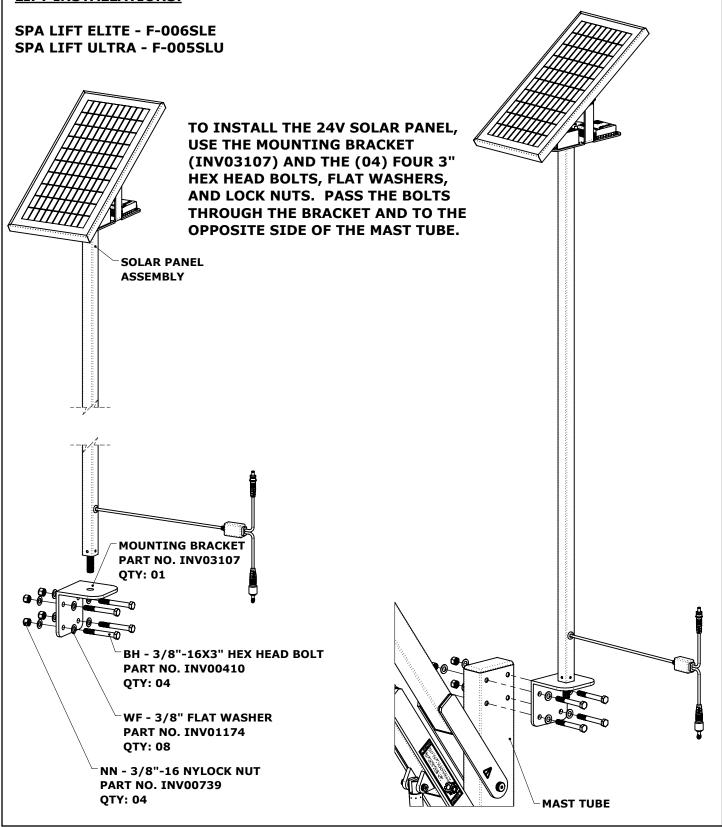




#### LIFT INSTALLATIONS:

REVOLUTION - F-702RLNA REVOLUTION XL - F-REVXL REVOLUTION XL-DD - F-REVXL-DD SCOUT 2 - F-802SC2 SCOUT EXCEL - F-SCTXL TITAN 600 - F-600TLNA TO INSTALL THE 24V SOLAR PANEL, LOWER THE SEAT TO THE DECK FOR SUPPORT. REMOVE THE (04) FOUR 3/8" NYLOCK NUTS, FLAT WASHERS, AND BOLTS FROM THE LIFTING EARS. INSTALL THE CHARGER USING THE (04) FOUR 4" HEX BOLTS, FLAT WASHERS, AND NYLOCK NUTS. THE SOLAR PANEL MAY BE MOUNTED ON EITHER SIDE.

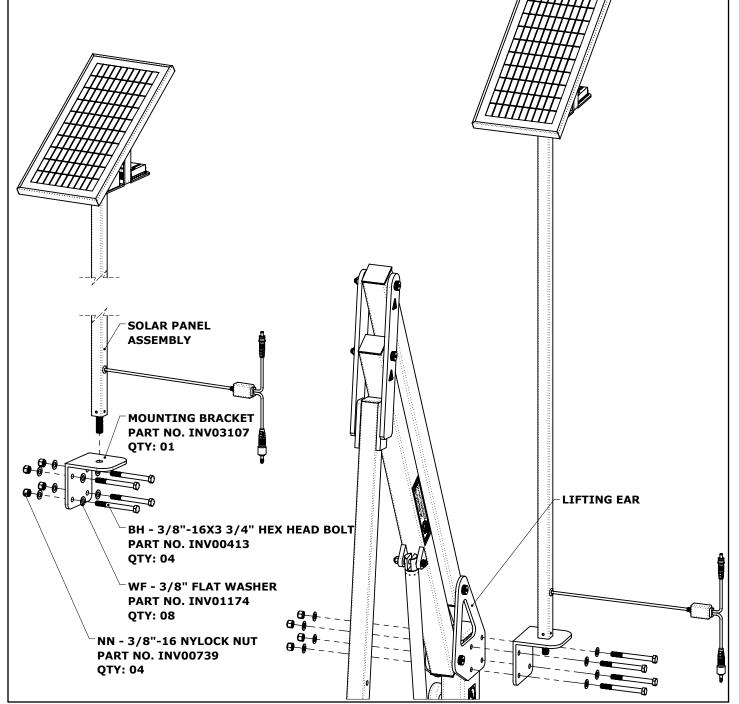



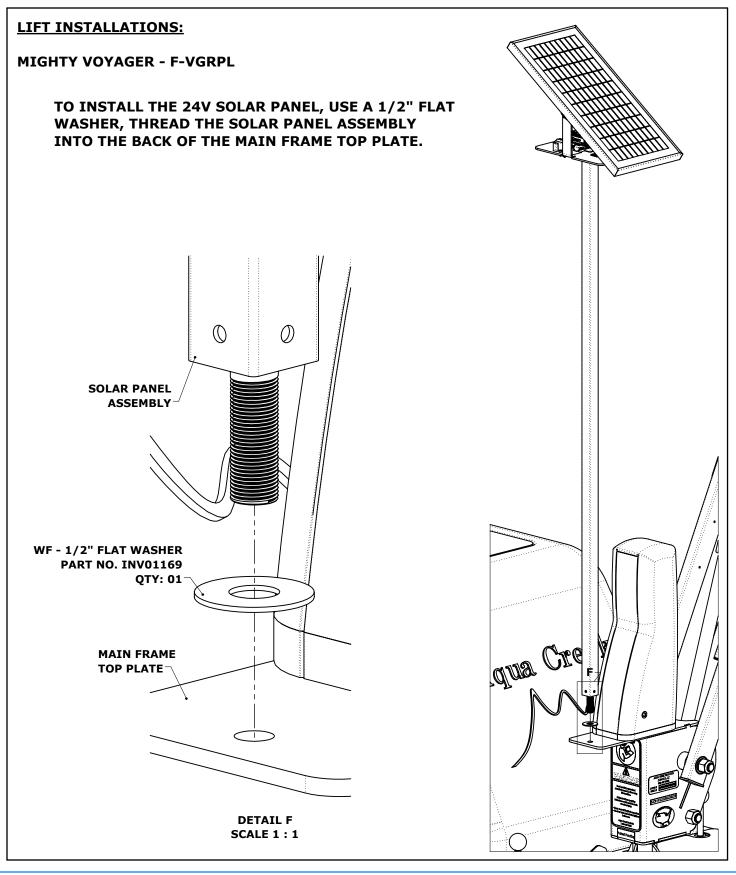



### Aqua Creek Products LIMITED ONE (1) YEAR WARRANTY

Aqua Creek Products, LLC (a.k.a. Aqua Creek) warrants to the original end user purchaser that products manufactured by Aqua Creek, when properly installed in accordance with assembly and installation instructions and properly used and maintained, shall be free from defects in material and workmanship for a period of **one (1) year from the date of original purchase**, provided that Aqua Creek receives prompt notice in writing of any defect or failure and satisfactory proof thereof, with the following exceptions:

#### Exceptions:

- This warranty specifically excludes reimbursement for labor to remove, repair, or install the product and any freight charges.
- This warranty does not cover any damages due to accident, force majeure, act of nature, misuse, abuse, negligence or failure to properly maintain any products, or normal wear and tear from day to day operations.
- In the event that any products are altered, repaired, or improperly installed by anyone without the prior written approval by Aqua Creek, all warranties are void.

To initiate a warranty claim, the owner of an Aqua Creek product must provide the place of purchase, in writing, with a full description of the product, its serial number, the dates of purchase and installation, and the exact nature of the defect. Within thirty (30) days after receipt of a written warranty claim by Aqua Creek, and barring any unforeseen delays, the place of purchase will be notified of Aqua Creek's decision regarding the claim. All warranty calculations are from date of original purchase at manufacturer's suggested retail price. Non-payment for product to Aqua Creek may void warranty.

If requested by Aqua Creek, any defective product must be returned, freight prepaid by customer, to Aqua Creek's designated factory location or duly appointed distributor for inspection and/or repair. Aqua Creek will, at its option, repair or replace the failed or defective item, and deliver the repaired product or replacement to the customer. All freight charges are the responsibility of the customer. Products returned to Aqua Creek for which Aqua Creek provides replacement under this limited warranty shall become the property of Aqua Creek. A new warranty period shall **NOT** be established for the repaired or replaced products. Such products shall remain under warranty only for the remainder of the original warranty period on the original products purchased.

This written limited warranty constitutes the final, complete and exclusive statement of warranty terms. No person or organization is authorized to make any other specific or implied warranties or representations on behalf of Aqua Creek.

THE WARRANTIES SET FORTH HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, WHICH ARE HEREBY DISCLAIMED AND EXCLUDED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE.

THE SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF ANY AND ALL WARRANTIES WITH RESPECT TO THE PRODUCTS SHALL BE LIMITED TO REPAIR OR REPLACEMENT AT AQUA CREEK'S DESIGNATED FACTORY LOCATION, OR DULY APPOINTED DISTRIBUTOR, OR IN PLACE AT AQUA CREEK'S OPTION. IN NO EVENT SHALL AQUA CREEK'S LIABILITY EXCEED THE ENTIRE AMOUNT PAID TO AQUA CREEK BY THE ORIGINAL PURCHASER FOR THE FAILED OR DEFECTIVE PRODUCT.

IN NO EVENT SHALL AQUA CREEK PRODUCTS, LLC BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS FROM ANY BREACH OF THIS LIMITED WARRANTY OR OTHERWISE.

For service and/or replacement parts, contact Aqua Creek Products, LLC Toll free: (800) 687-3552 Local/Intnl: (406) 549-0769